


ASSEMBLY INSTRUCTIONS

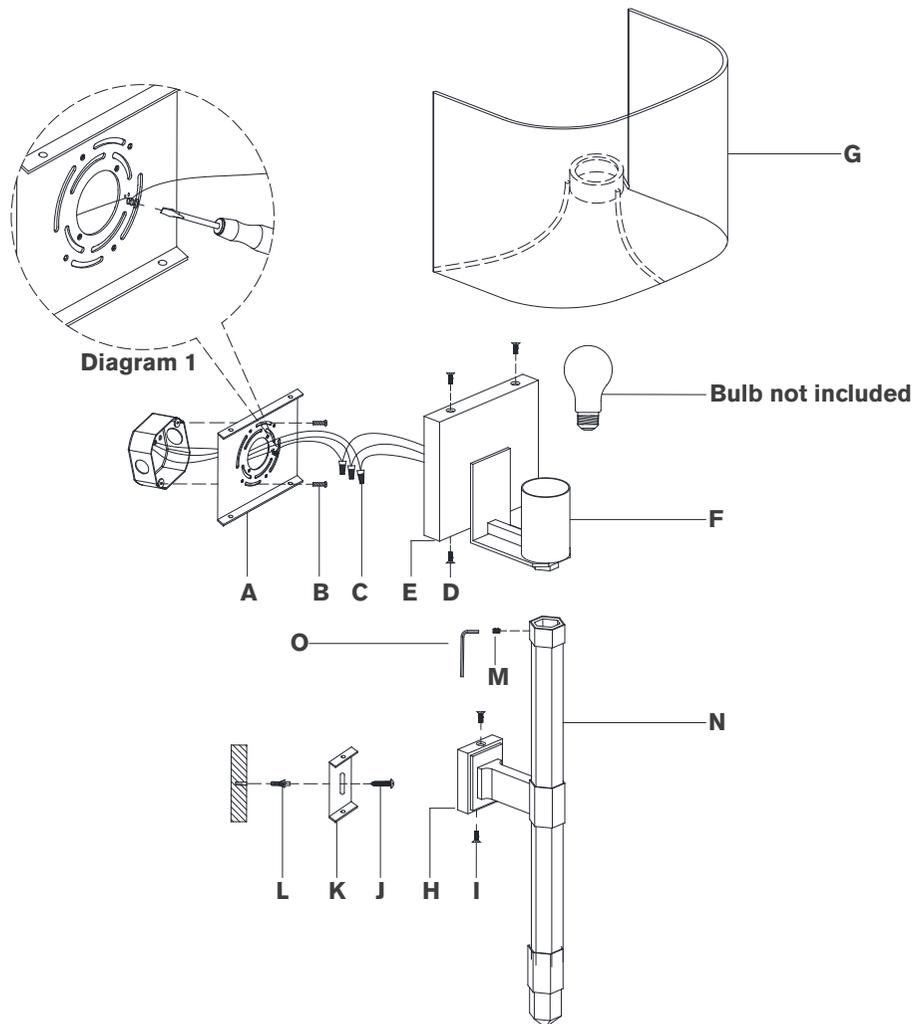

Adaline Medium Tail Sconce

Item # SK 2904

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Drill
Pencil	Hammer	Scissors
Measuring tape		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plates (**A & K**) from fixture by removing screws (**D & I**).
3. Place bottom of socket assembly (**F**) into top of body (**N**), securing with set screw (**M**) using provided wrench (**O**).
4. Using mounting plate (**A & K**) as a guide, mark anchor positions.
NOTE: Carefully measure distance between mounting points for mounting plates (**A & K**) before moving to the next step.
5. Using a drill bit slightly smaller than the anchor, drill a hole in the marked position. Install anchor (**L**) into the hole using hammer.
6. Secure wood screws (**J**) to anchors (**L**), leaving 1/8" of exposed thread in order to hang fixture.
7. Hang mounting plate (**K**) to wood screws (**J**).
8. Install mounting plate (**A**) to junction box and secure with mounting screws (**B**).
9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (**C**).
NOTE: It is imperative that the fixture is grounded.

ASSEMBLY INSTRUCTIONS

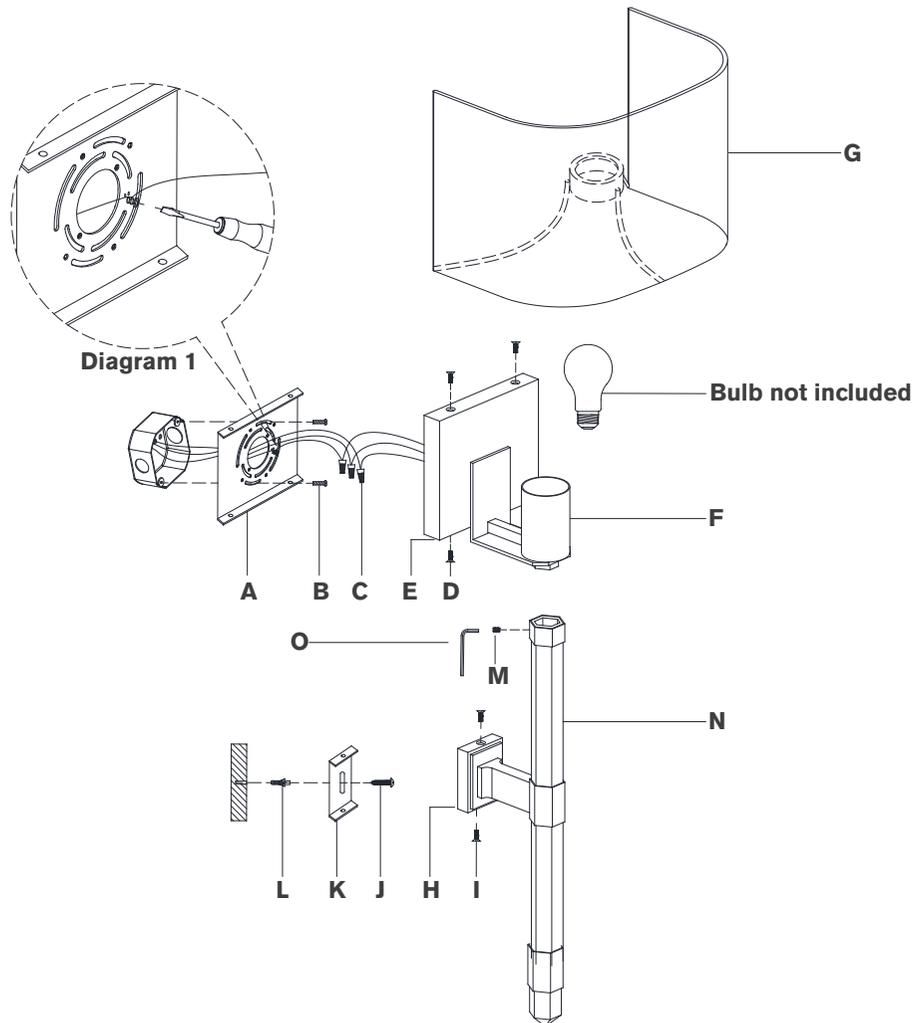

Adaline Medium Tail Sconce

Item # SK 2904

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(C)**.
11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(C)**.
- CAUTION:** Do not reverse the hot and neutral connections.
12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install fixture to mounting plates **(A & K)**, securing with screws **(D & I)**.
14. Place shade **(G)** onto the socket cup **(F)**.
NOTE: If shade has additional packaging, carefully cut off from interior of shade to avoid damages.
15. Install light bulb into the socket.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.